


#908 Battery Replacement

- Flathead Screwdriver
- Phillips Head Screwdriver

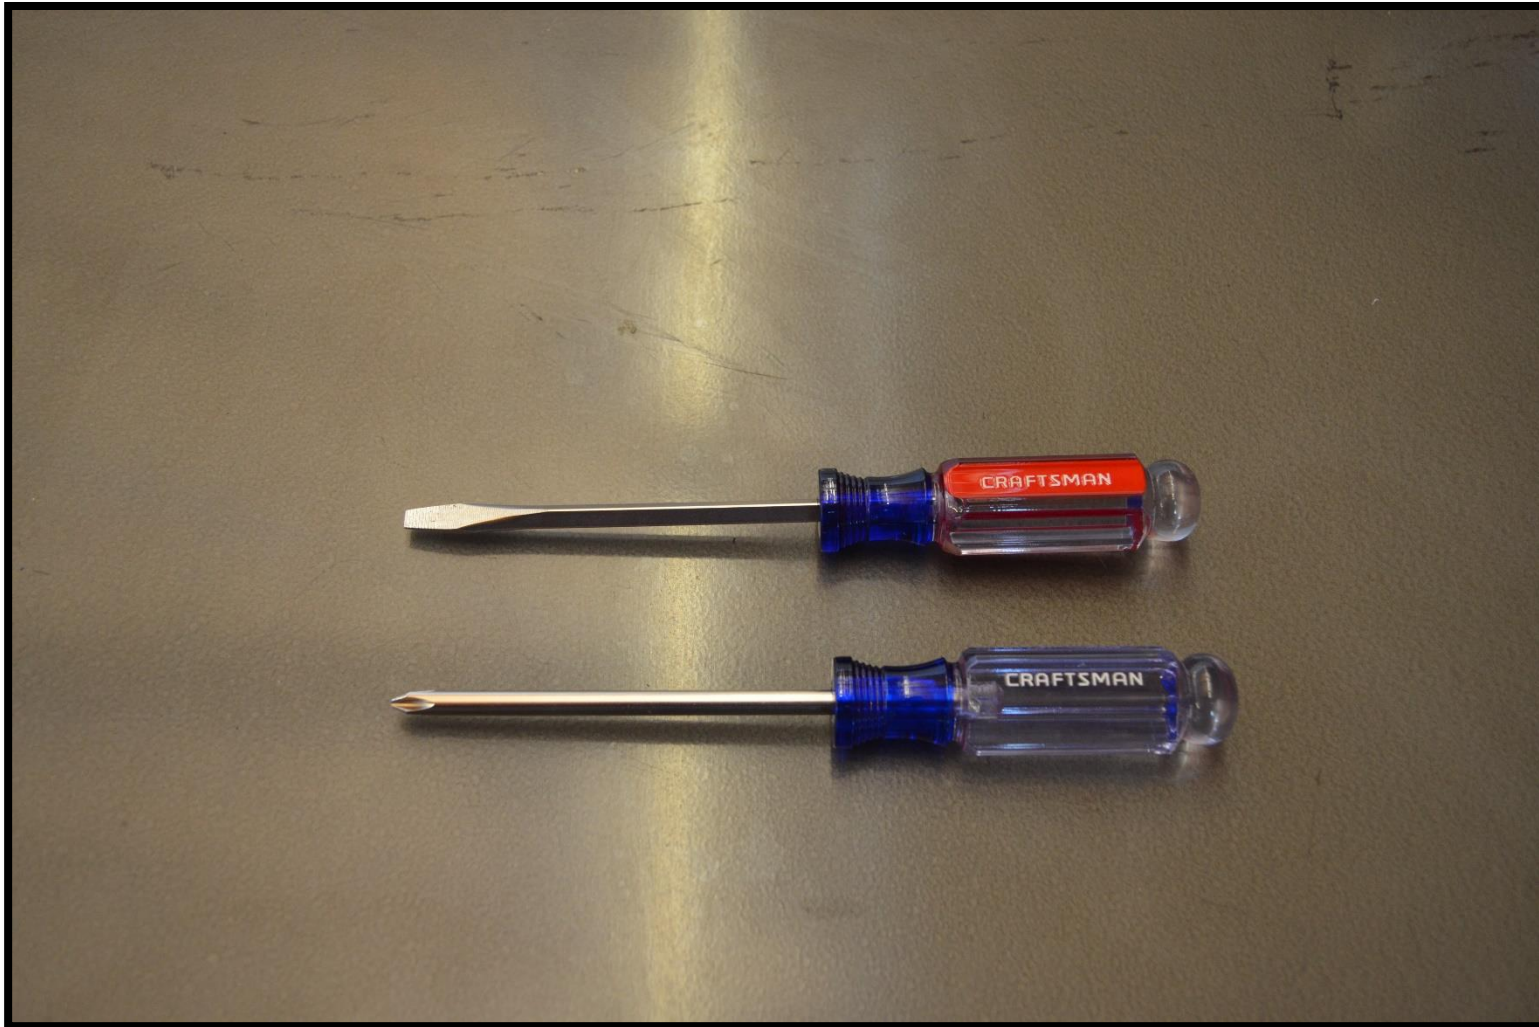




Use a flathead screwdriver or a coin to turn the seat lock to the unlocked position.






Remove the seat from the vehicle by pulling upward. This will expose the electronics compartment underneath.




Unplug the battery from the product by pushing down on the lock tab.

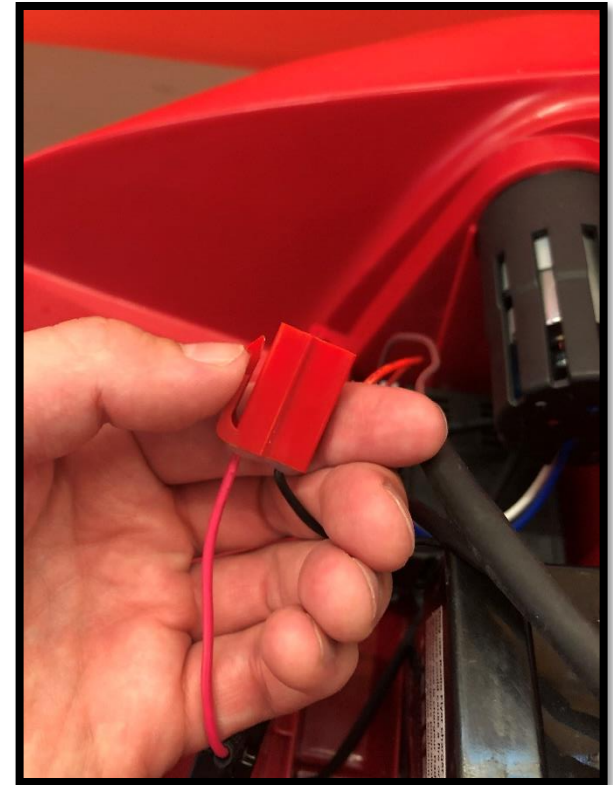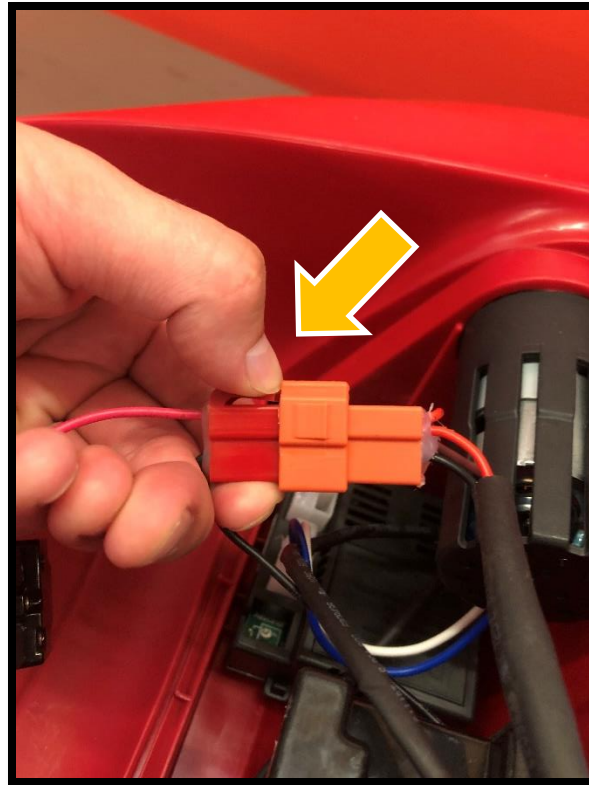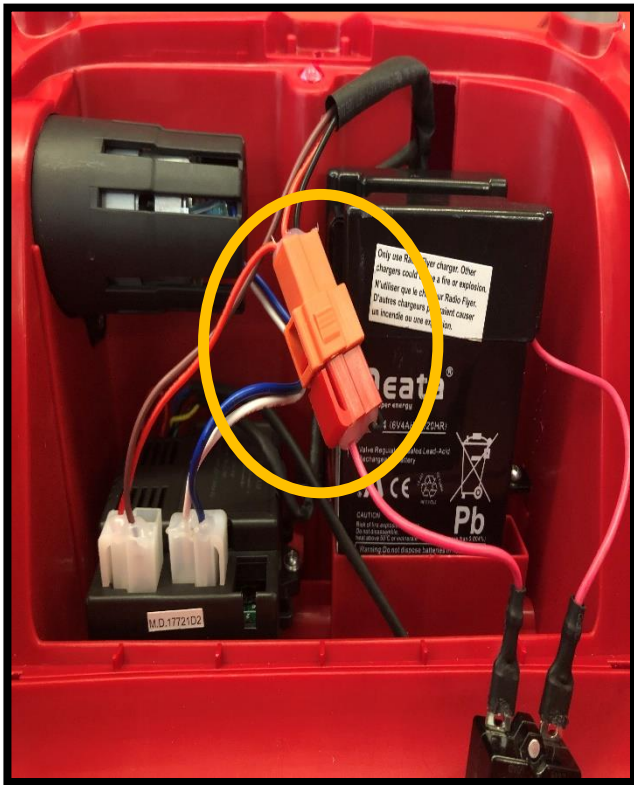

Use a Philips head screwdriver to remove the two screws securing the battery mounting bracket.

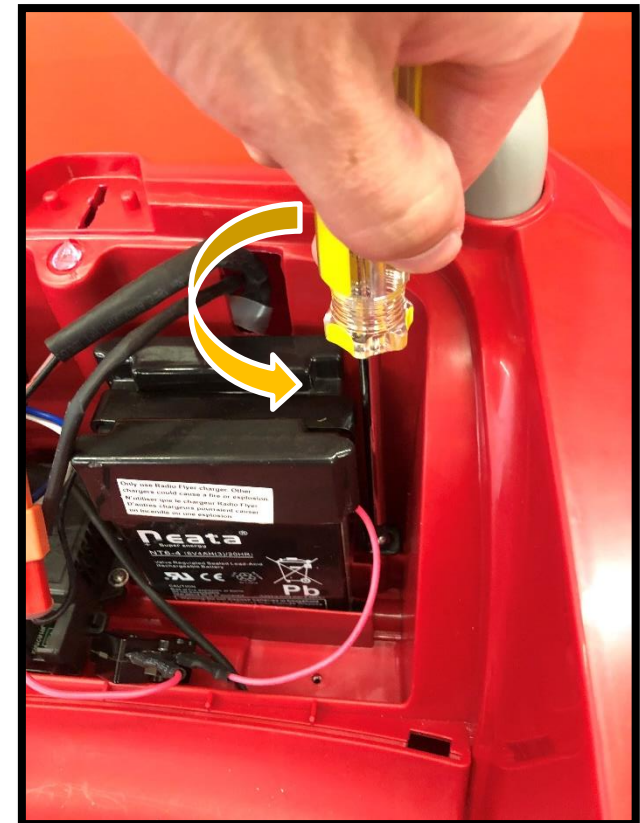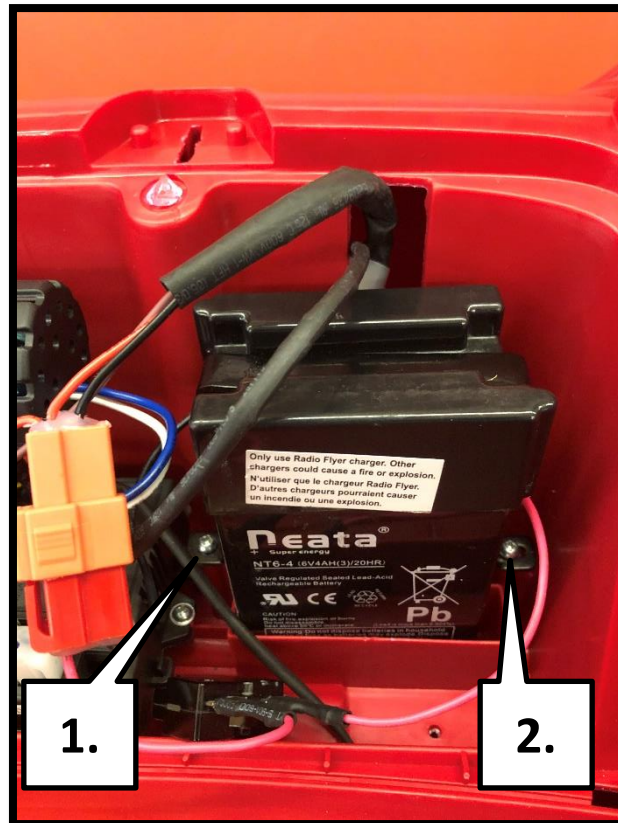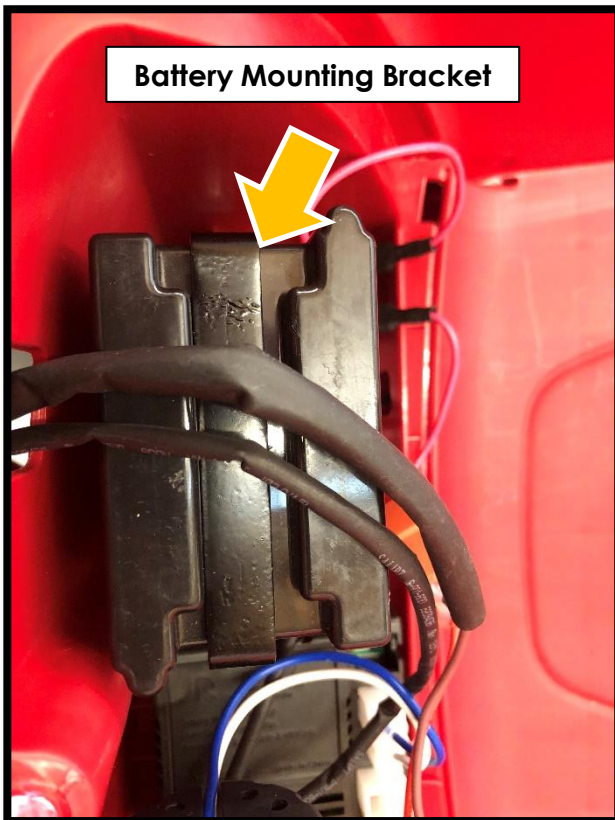


Remove the battery mounting bracket and battery from the vehicle.


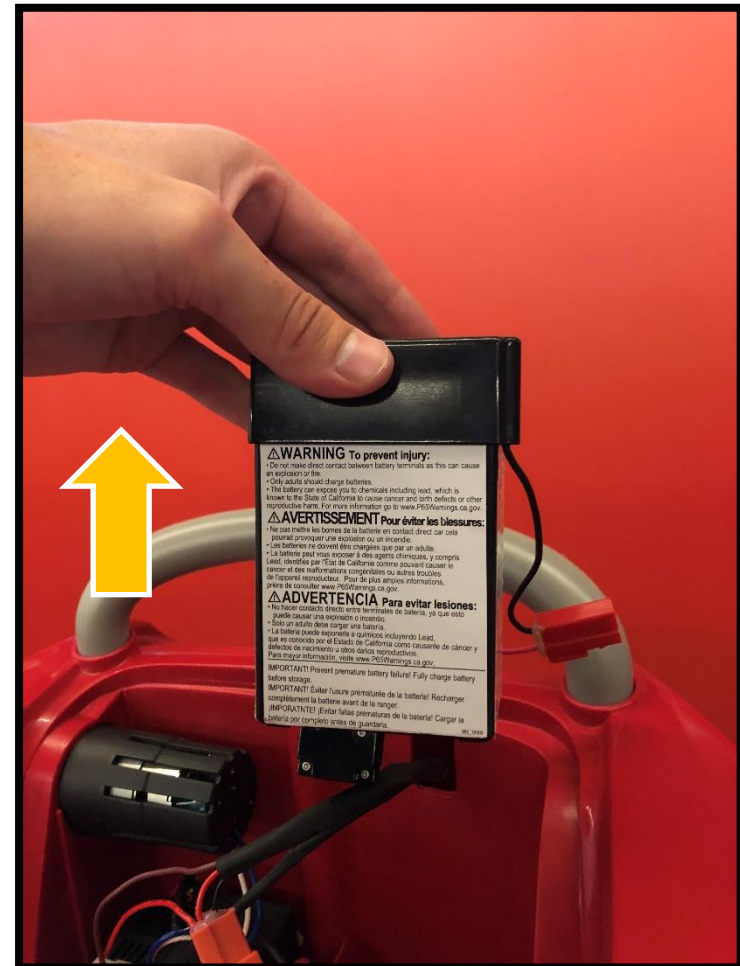


Place the new battery into the vehicle. Ensure the connector is facing toward the PCBA (left-hand image)

Reinstall the battery mounting bracket by inserting and tightening the mounting screws using a Phillips head screwdriver.

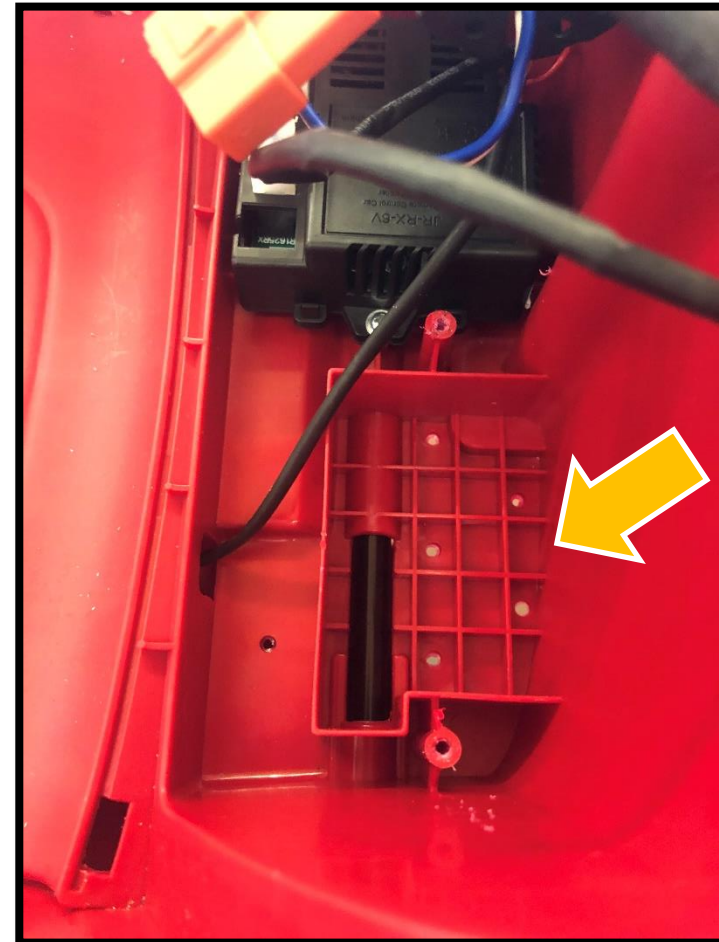

Plug the new battery into the product.

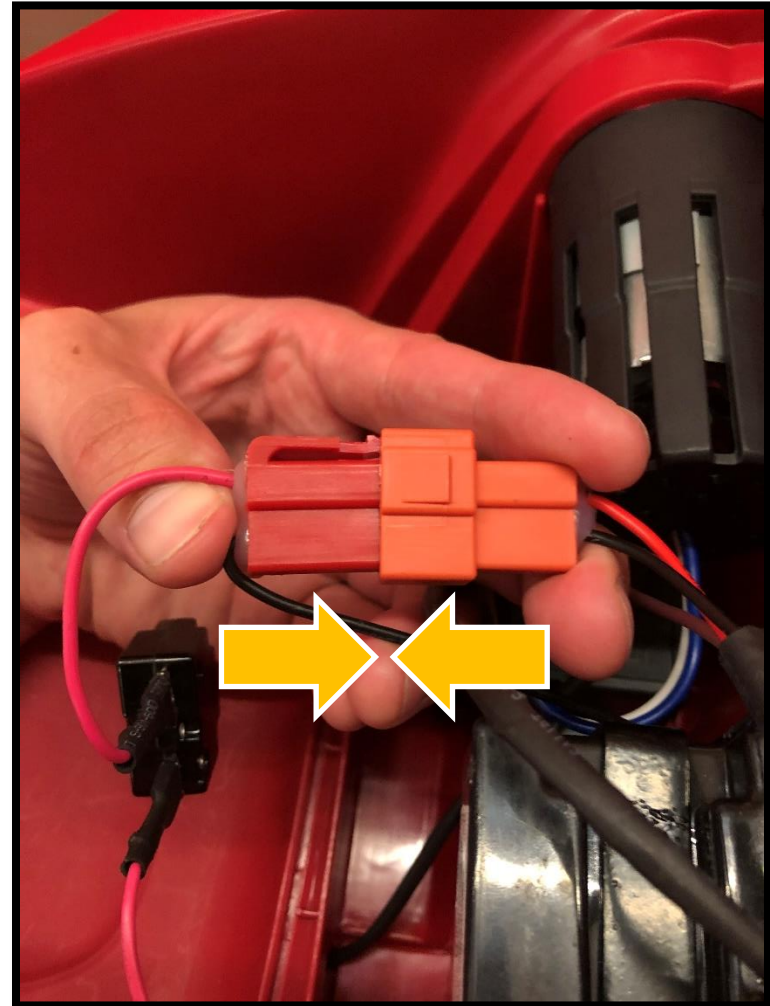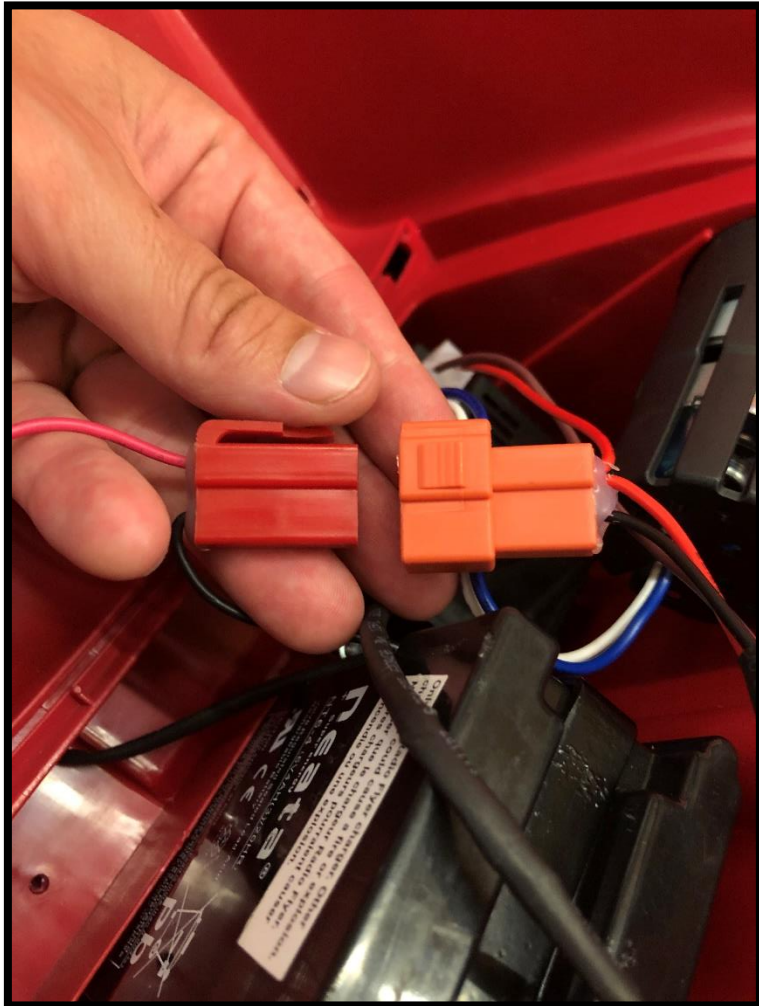

Place the seat back onto the vehicle. Ensure that it is seated correctly in the seat dropout.

Use a flathead screwdriver or a coin to turn the seat lock to the locked position.



Now you're ready to ride!

