



**MOMENTUM JOGGING STROLLER
OWNER'S MANUAL**

Model #1000

Radio Flyer started creating smiles and warm memories for children of all ages in 1917. Today, we remain a Chicago-based family company committed to creating quality products that inspire adventures fueled by laughter and joy.

We apply research, consumer feedback, and cutting-edge technology to design beautiful, innovative products that are loved by families across the globe. Our world-class team is committed to making the world a happier and greener place – as a certified BCorp, Radio Flyer meets the highest standards of positive environmental and social impact.

We hope your Radio Flyer sparks smiles, imagination, and lifelong memories. We can't wait to see where your new ride takes you.

The Radio Flyer Team
Time Flies. Enjoy the Ride.®

ABOUT THIS MANUAL

This owner's manual contains details of your Radio Flyer Momentum Jogging Stroller including instructions for assembly, operating and maintenance. To ensure safe operation and prevent injury, please carefully read all information in this manual before use. Always take responsibility for your child's safety as well as your own. Take time to familiarize yourself with your Momentum™ Jogging Stroller before use.

Please keep this manual for future reference. If you have any questions about your product, contact the Radio Flyer Customer Service Team. Our award-winning service team is committed to providing you with world class support, right from Chicago.

Phone: 1-800-621-7613

Email: customerservice@radioflyer.com


Customer Service Hours: 8am – 5pm CST, Monday through Friday

Radio Flyer Service Website: radioflyer.com/customer-service

TABLE OF CONTENTS

Component Guide	6
Important Safety Instructions	7
Getting Started	8
Assembly Instructions	8
Rear Brakes	11
Adjusting Handlebar Height	11
Securing Your Child	12
Quick Switch™ Steering	13
Folding the Stroller	14
Canopy	15
Front Wheel Tracking Adjustment	16
Safety Checklist	17
Maintenance	18
Warranty	18

COMPONENT GUIDE

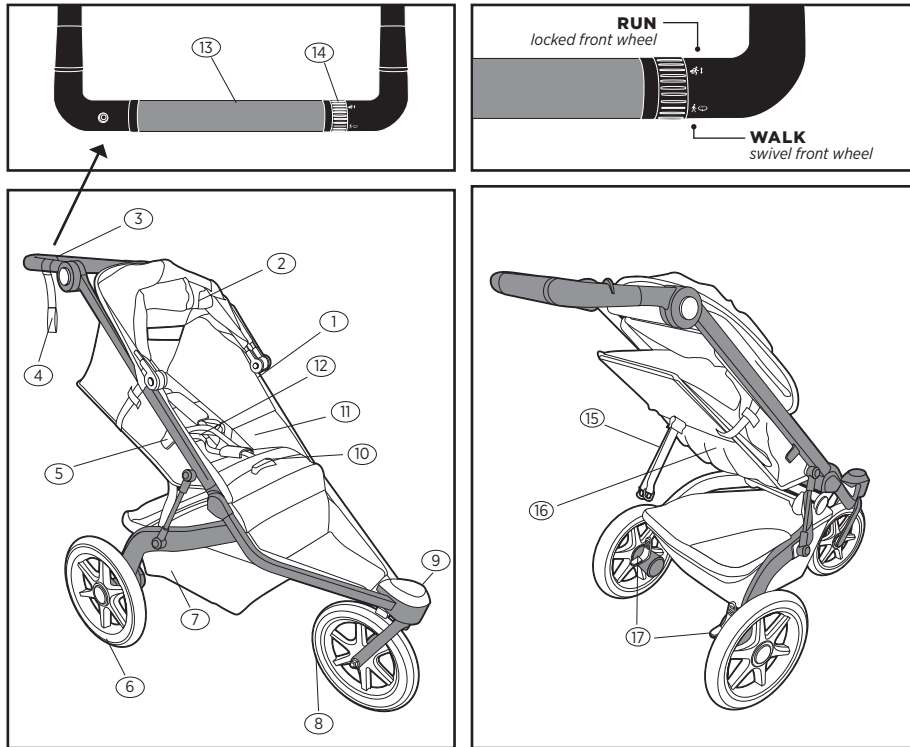

- | | |
|---------------------------------|---------------------------|
| 1. Frame Assembly | 10. Fold Strap |
| 2. Canopy with Mesh Ventilation | 11. Snack & Drink Pockets |
| 3. Adjustable Handlebar | 12. Five-Point Harness |
| 4. Safety Wrist Strap | 13. Twist Handle |
| 5. Fold Lock | 14. Mode Selector |
| 6. Rear Wheel | 15. Seat Recline Straps |
| 7. Storage Bag | 16. Storage Pocket |
| 8. Front Wheel | 17. Rear Parking Brakes |
| 9. Steering Adjustment Knob | |

IMPORTANT SAFETY INSTRUCTIONS

Safety Warnings

WARNING! When using this product, basic precautions should always be followed including the following.

- Never leave the child unattended.
- Only one rider at a time.
- This product is not suitable for children under 6 months.
- Children must keep arms and legs inside the stroller at all times. Avoid wearing loose clothing (baggy sleeves, untied shoelaces, etc.) while in the stroller.
- Do not turn or swerve sharply while jogging or running. Slow down to walking speed prior to making turns.
- Always engage both rear brakes when your child enters or exits the stroller.
- Do not allow children to sit or stand in the storage bag.
- Always take care when folding and unfolding the product to prevent finger entrapment. Only adults should fold and unfold the stroller.
- Ensure fold lock is properly engaged when lifting the folded stroller to prevent unintended opening.
- Do not run or jog with the stroller in inclement weather where traction is limited from rain or ice.
- Surface wash fabric with warm water and mild soap. Do not use cleaning solvents or bleach. Do not machine wash fabric.
- Always use safety wrist strap while jogging or running.
- Do not install a car seat or any other seating device not approved by the manufacturer inside the stroller.
- Do not modify the stroller. Hanging bags not approved by manufacturer from the handlebar may cause the stroller to become unstable.
- Do not use stroller to transport a child on stairs or ramps. Do not use handlebar to lift or carry the stroller.
- Do not run / jog with children under 6 months. We recommend consulting with your pediatrician before running with your child. Children's physical development levels vary and cannot be solely based on age and/or weight.
- Exceeding the product weight limits may cause a hazardous unstable condition to exist.
- Before running, jogging, or walking fast, engage the front wheel lock by switching to RUN mode with the Mode Selector.

Maximum Weight / Height of Child: 50lbs (22.7kg) / 44 in (111cm)

Age Range for Child: 6 months – 5 years

Maximum Cargo Weight: Storage Bag = 10lbs (4.5kg) | Storage Pocket = 3lbs (1.4kg) | Snack Pockets = 1lb (0.4kg)

Tire Pressure: 36psi (2.5 bar)

Failure to comply with manufacturer's instructions can lead to serious injury or death passenger/rider.


Save these instructions

GETTING STARTED

Assembly Instructions

The following steps provide a general overview of the assembly process for your jogging stroller. Adult assembly required.

Visit radioflyer.com or contact customerservice@radioflyer.com for additional assistance assembling, using, repairing, or maintaining your jogging stroller.

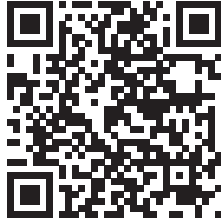

The following items are required for assembly:

- Scissors or flat-sided cutters




Step 1: Unpack your jogging stroller

Remove the jogging stroller from the carton and set it on a flat, clean surface. Place the frame assembly upright. Remove all packaging materials and carefully cut all zip-ties. Do not use scissors or knives to remove tape. Verify that you have all the components listed below. Contact Radio Flyer Customer Service if any components are missing.

- Frame assembly
- Rear Wheels (x2)

Step 2: Unfold the Stroller


- A. Pull outward on the fold lock, located on the right side of the frame, grip the footwell and lift up on the frame to begin unfolding.
- B. While holding the footwell with one hand and the sidewall with the other, spread the two halves of the frame apart until fully unfolded.
- C. Press down on the seat to ensure the stroller locks into the unfolded position. Rest the stroller upright on the ground before the next step.

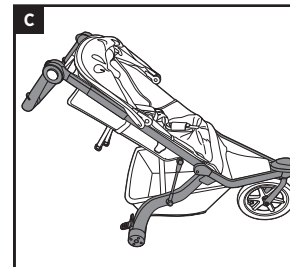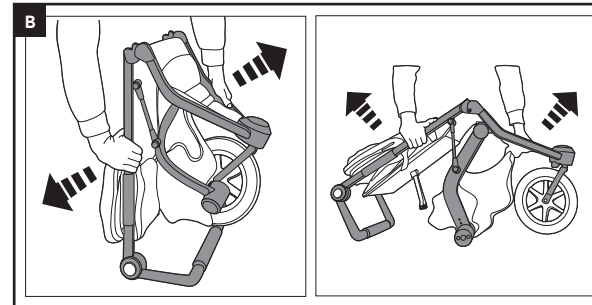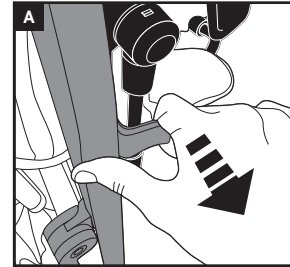

Step 3: Install Rear Wheels


- A. Lean the frame assembly to the left and insert the right rear wheel until it locks.
- B. Lean the frame assembly to the right and install the left rear wheel until it locks.

Note: After installing, pull firmly on each wheel to ensure that the axle is fully engaged. Repeat this check each time you use the stroller.

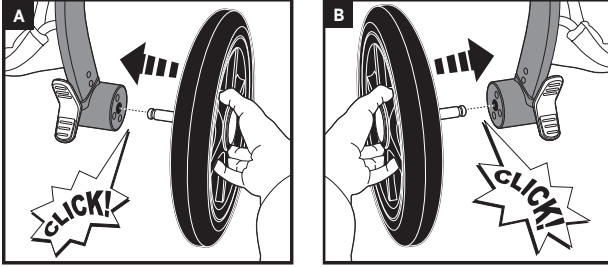

Step 4: Connect Fold Prevention Straps

- A. Locate the fold prevention straps underneath the stroller seat pad. Snap each side of the safety strap buttons to the underside of the frame.

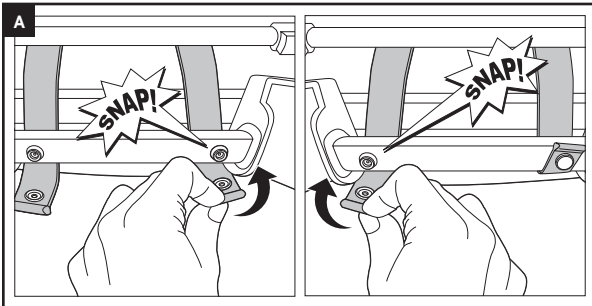


⚠ WARNING! Ensure fold prevention straps are properly engaged prior to using stroller.

Using the Rear Brakes


- A. Push the brake pedal down to lock the rear brake.
- B. Push the brake pedal up to release the rear brake.

Note: Each rear wheel has an independent brake.

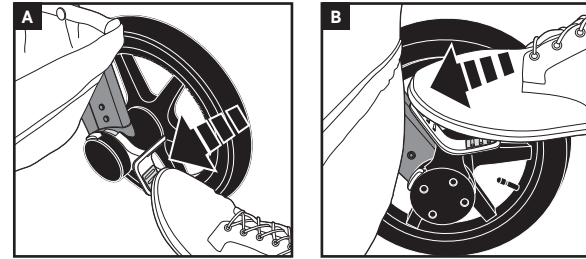


Removing the Rear Wheels

- A. Push grey button behind the rear brake.
- B. While holding grey button depressed, pull on the wheel to remove from the frame.

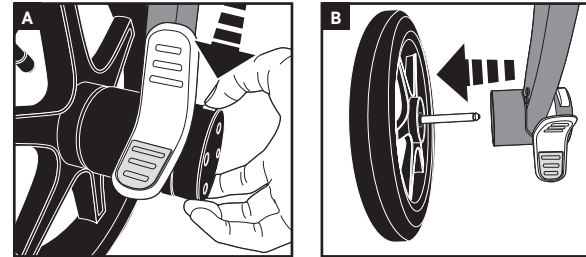




Adjusting the Handlebar Height

- A. Push the grey buttons on both sides of the handlebar and rotate the handlebar to the preferred height. Release the buttons to lock the handlebar into position.

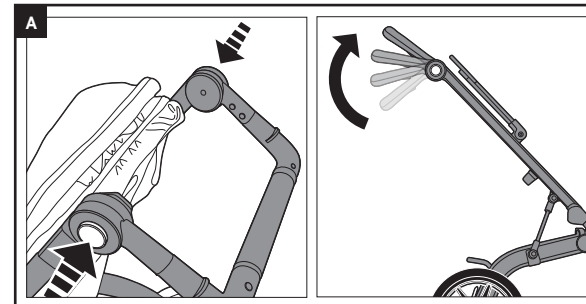

Securing your Child

- Before loading or unloading your child, lock each of the rear brakes. After loading your child into the stroller, route each of the child's arms through the gaps between the waist and shoulder sections of the seat belt straps. Insert each clip into the center buckle.
- Fasten and adjust the seatbelt to fit securely. Shoulder strap position can be adjusted to match rider's height.
- Adjust the recline of the seatback. Squeeze both sides of the recline release clamp and let go when seat is in the desired position.

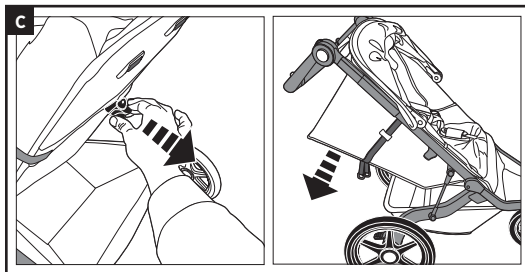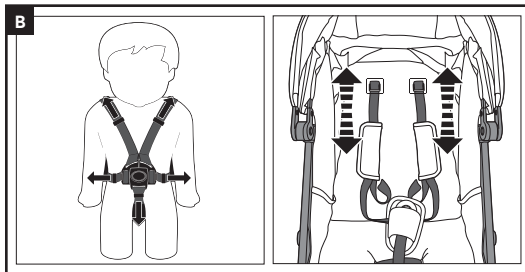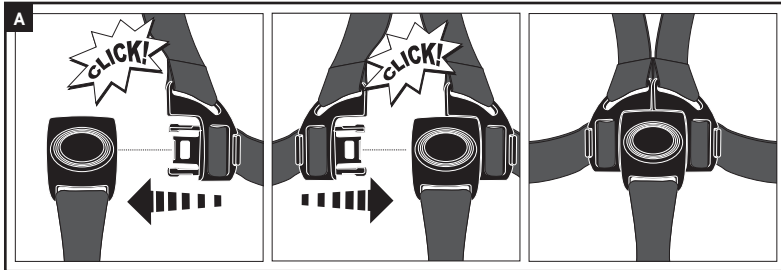

⚠ WARNING! Avoid serious injury from falling or sliding out. Always use 5-point harness.

Quick Switch™ Steering



⚠ WARNING! Before running, jogging, or walking fast, engage the front wheel lock by switching to RUN mode with the Mode Selector.

- To lock front wheel, rotate the Mode Selector to the RUN position, and swivel the front wheel until the front wheel lock engages.
- Rotate the Twist Handle toward you to disengage the front wheel lock temporarily to make turns or avoid obstacles. Release the grey section of the handlebar to reengage the front wheel lock.
- To unlock front wheel, rotate the mode selector to WALK position and rotate the grey section of the handlebar toward you until the handlebar clicks.




Scan to Learn More

Note: Locking the front wheel while running will help prevent front wheel shimmy. Engage WALK mode during casual walks for more maneuverability.

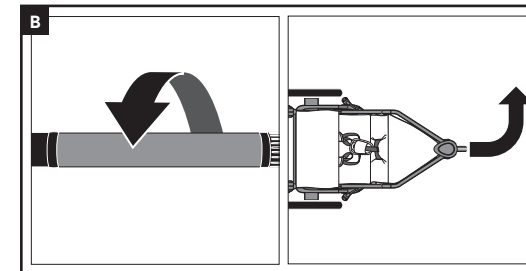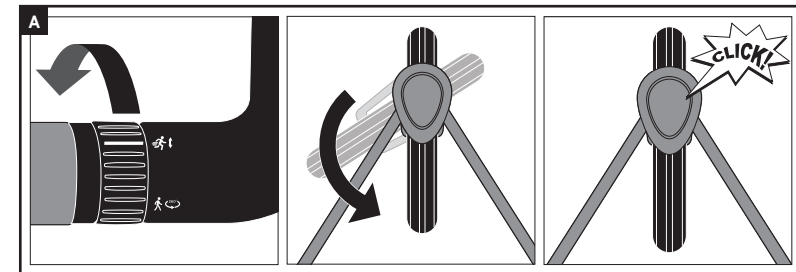





⚠ WARNING!
Slow down to a walking pace when turning or avoiding obstacles to avoid tipping the stroller.

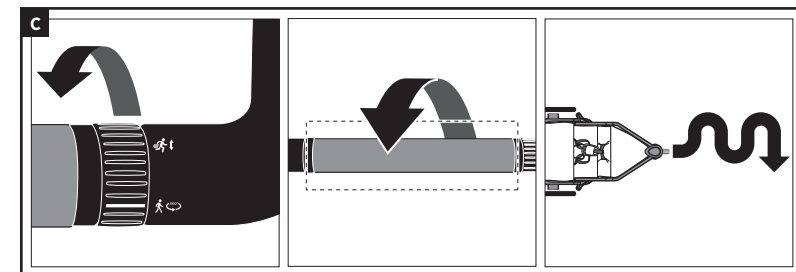

Folding the Stroller

- Disconnect the fold prevention straps underneath the frame by unsnapping the buttons.
- Push each of the handlebar buttons and pivot the handlebar to its lowest position.
- Rotate the mode selector on the handlebar to RUN position, and swivel the front wheel until it locks in the forward facing position.
- Pull up on the fold strap on the seat pad to start the fold. Raise the stroller off of the ground making sure that the handlebar does not crash with the ground as it is lowering. Rest the stroller in the upright position, and push on the footwell until the fold lock engages.


Note: Remove passengers and cargo before folding the stroller.

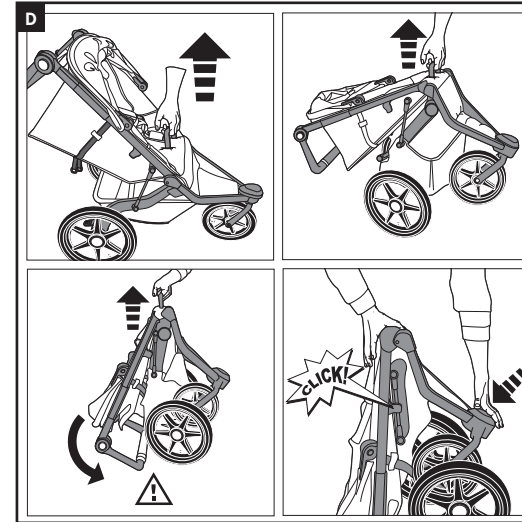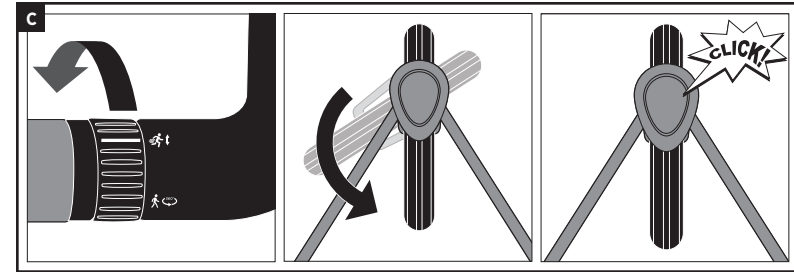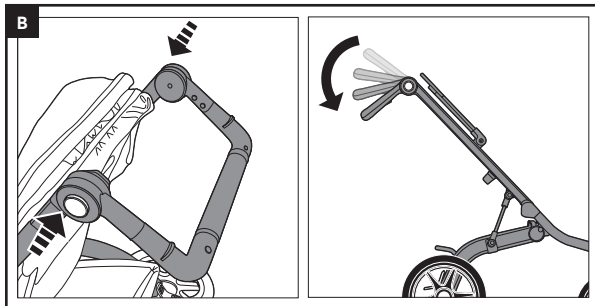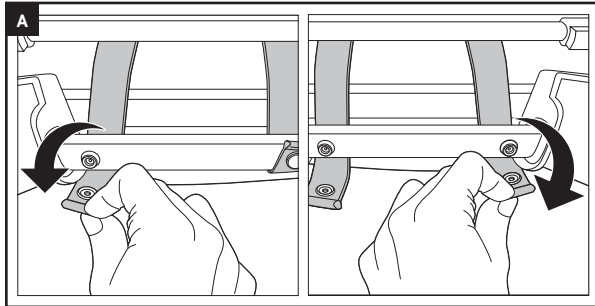

⚠ WARNING! Failure to move handlebar into its lowest position will prevent the folded stroller from standing and can lead to damage of the handlebar.

Canopy

- The canopy has an extendable mesh section. Unzip the rear portion of the canopy and pull forward to fully extend the canopy.
- Lift up on magnetic flap to reveal peek-a-boo window on the top of the canopy.

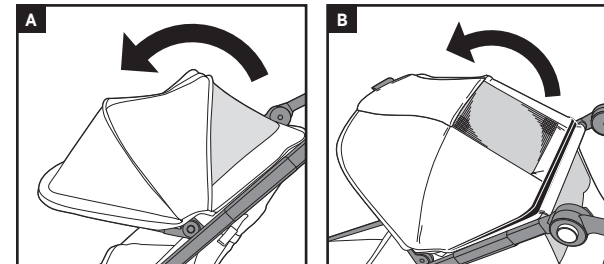


Front Wheel Tracking Adjustment

If stroller is tracking left or right while in RUN mode please follow these steps to adjust the front wheel:


If Stroller Pulls LEFT

- If your stroller is pulling LEFT, turn the tracking knob counterclockwise, in the “R” direction, as needed until the stroller rolls straight.

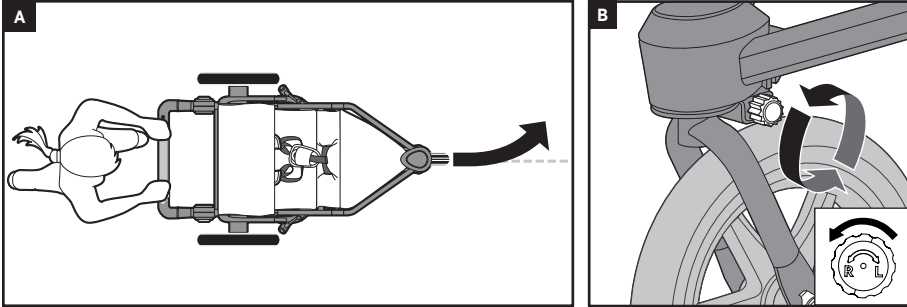

If Stroller Pulls RIGHT

- If your stroller is pulling RIGHT, turn the tracking knob clockwise, in the “L” direction, as needed until the stroller rolls straight.

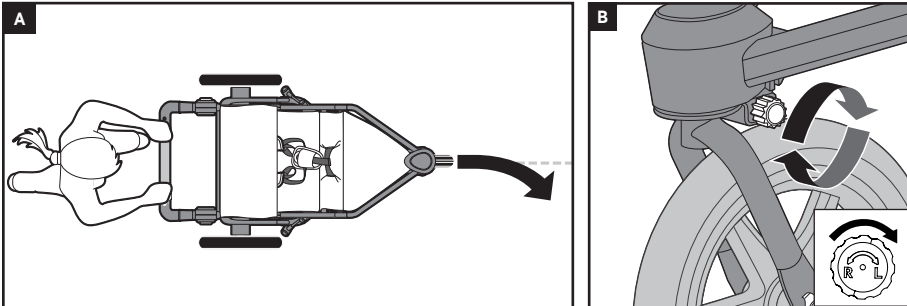

SAFETY CHECKLIST

Check before each use:

- Wheels are properly secured to stroller.
- Tires are inflated to recommended pressure on the tire sidewall.
- Child's weight does not exceed 50lbs (22.7kg).
- Cargo in storage bag does not exceed 10lbs (4.5kg) and cargo in rear pouch does not exceed 3lbs (1.4kg).
- Child is properly secured with 5 point harness.
- Use safety wrist strap if jogging or running.

⚠ WARNING! Do not use the product if there are any damaged or missing parts.

Check Monthly:

- Inspect handlebar, rear brakes, frame tubing, seat belt connectors, and hardware for damage.
- Check that bolts are tight.
- Inspect tires and wheels for wear, cracks and trueness.
- Inspect fabric parts for rips, abrasions, and missing or damaged hardware.
- Contact Radio Flyer Customer Service for replacement of any damaged or worn parts.

MAINTAINING YOUR MOMENTUM JOGGING STROLLER

Storage

For longer product life, store stroller indoors. The stroller should not be stored at temperatures less than -10 degrees F (-23 degrees C) or greater than 150 degrees F (65 degrees C). Ensure stroller is completely dry before storing. Wheels should not be stored inside the stroller seat as stains or damage to fabric may result.

Fabric Care

Hand wash fabric parts with warm water and mild soap. DO NOT use bleach or solvents. Wipe dry and store out of direct sunlight in a dry, well ventilated area.

WARRANTY

